


With Forming Screw

1. Cut in length...
2. Put the nut over...
3. Put the clamp ring on...
4. Forming by the screw...
5. Put the seal on...



With Forming Tool

1. Put the nut over...
2. Forming tool fits into the 2nd Bellow...
3. Hit with the Piston several times to flatten the surface...
4. Put the clamp ring on...
5. Put the seal on...

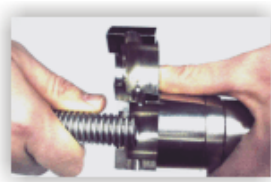

COTSWOLD VALVES LTD

27 Upper Mills Estate Bristol Rd Stonehouse Glos GL10 2BJ
INDUSTRIAL & PROCESS VALVES & CONTROLS